INSTALLATION INSTRUCTIONS FOR PART 95-3302

APPLICATIONS

See application list inside

GM multi-kit 2004 - up
95-3302

KIT FEATURES

- Double DIN mount radio provision
- Stacked ISO mount provision
- Painted to match factory dash
- **95-3302 = Matte Black 95-3302S = Silver**

KIT COMPONENTS

- A) Double DIN Housing • B) Double DIN Brackets

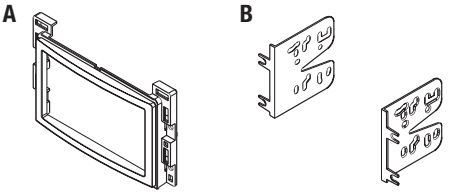

WIRING & ANTENNA CONNECTIONS (Sold Separately)

Wiring Harness:

- See www.metraonline.com for specific interface applications

Antenna Adapter:

- 40-GM10 GM antenna adapter 1988-up
- 40-CR10 Chrysler antenna adapter 2002-up

TOOLS REQUIRED

Panel Removal Tool • Phillips Screwdriver • Small Flat Blade Screwdriver • Socket Set • Cutting Tool



© COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION

Applications

Chevrolet
Cobalt 2005-2010
Equinox 2005-2006
HHR 2006-up
Malibu 2004-up

Pontiac
G5 2007-2010
G6 2005-2009
Solstice 2006-2009
Torrent 2006

Saturn
Aura 2007-2009
Ion 2006-2007
Sky 2006-2009
Vue 2006-2007

Note: (Cobalt and G5 2005-2006)
To retain Onstar use 99-3303 instead.

Note: (Malibu and G6 only)
The Driver Information Center and radio are one unit. Removal of the radio will prohibit the vehicle owner from programming any of the features of the Driver Information Center. However once the features are programmed the vehicle will retain all the settings. An alternative kit 99-3303 inludes a replacement driver information center with programming capabilities.

The 99-3303 does not allow for Double DIN installations.

Caution
Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.

****NOTE: Refer also to the instructions included with the aftermarket radio.***

KNOWLEDGE IS POWER
Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.

Metra recommends MECP certified technicians

Table of Contents

Dash Disassembly

– Chevrolet Cobalt 2005-2010 4-5
– Chevrolet Equinox 2005-2006 6
– Chevrolet HHR 2006-up 7
– Chevrolet Malibu 2004-2007 8-9
– Chevrolet Malibu 2008-up 10
– Pontiac G5 2007-2010 4-5
– Pontiac G6 2005-2009 11
– Pontiac Solstice 2006-2009 12
– Pontiac Torrent 2006 6
– Saturn Aura 2007-2009 13
– Saturn Ion 2006-2007 14
– Saturn Sky 2006-2009 15
– Saturn Vue 2006-2007 16

Kit Assembly

– Double DIN mount radio provision 17
– Stacked ISO mount radio provision 18

Chevrolet Cobalt 2005-2010
Pontiac G5 2007-2010

1. Unclip and remove trim panel from above glove box. (Figure A)
2. Unclip upper edge of panel below steering column and let hang. Not necessary to remove completely. (Figure B)
3. Unclip and remove small trim panel to right of ignition switch. (Figure C)

Continued on next page

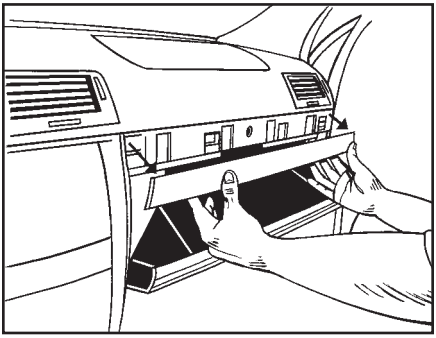

(Figure A)

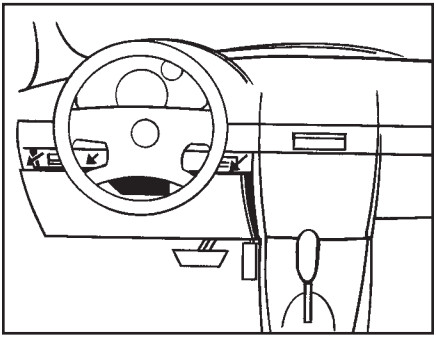

(Figure B)

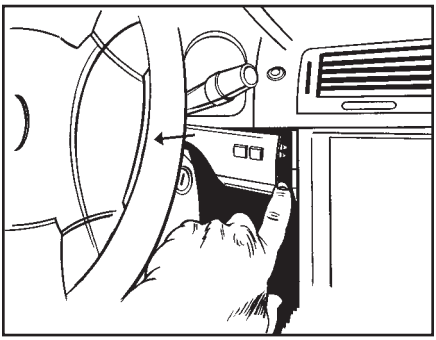

(Figure C)

Chevrolet Cobalt 2005-2010
Pontiac G5 2007-2010

4. Unclip and remove trim panel surrounding radio and climate controls. (Figure D)

5. Remove (4) 9/32 screws securing radio. Unplug and remove the radio. (Figure E)

Continue to kit assembly

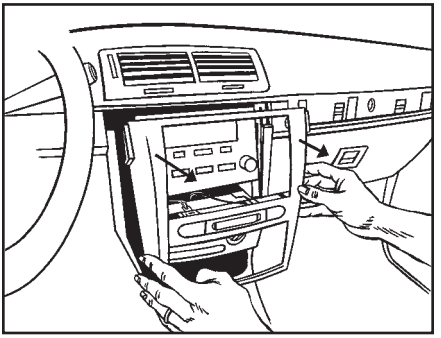

(Figure D)

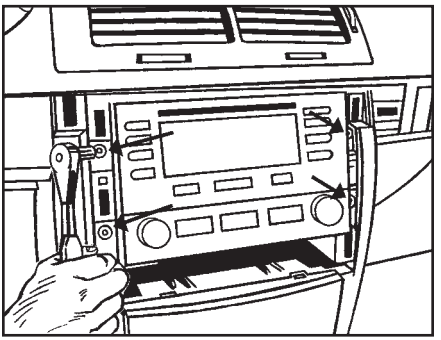

(Figure E)

Chevrolet Equinox 2005-2006
Pontiac Torrent 2006

1. Unsnap panel below power window switch and remove. ***Note: This allows you to unplug the window switch easier.*** (Figure A)
2. Unsnap and remove entire panel surrounding radio and shifter. (Figure B)
3. Remove (4) 9/32 screws securing radio. Unplug and remove the radio. (Figure C)

Continue to kit assembly

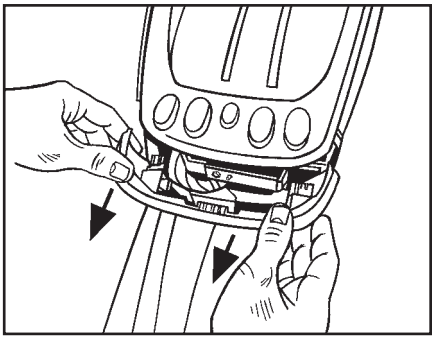

(Figure A)

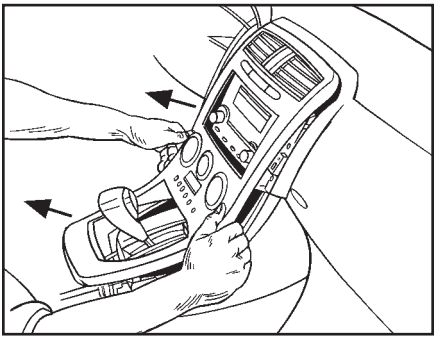

(Figure B)

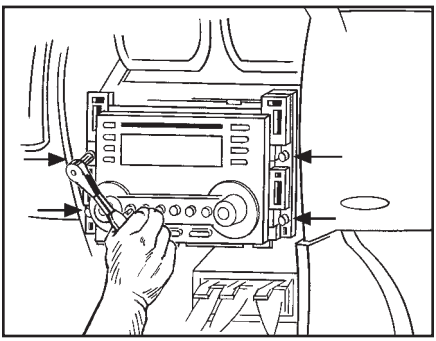

(Figure C)

Chevrolet HHR 2006-up

1. Unclip and remove entire panel surrounding radio and a/c controls including the a/c vents. (Figure A)
2. Remove (8) 9/32" screws securing radio and a/c control to remove radio. (Figure B)

Continue to kit assembly

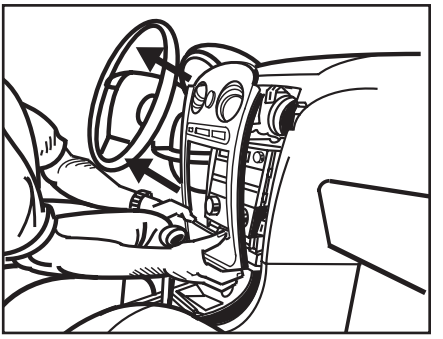

(Figure A)

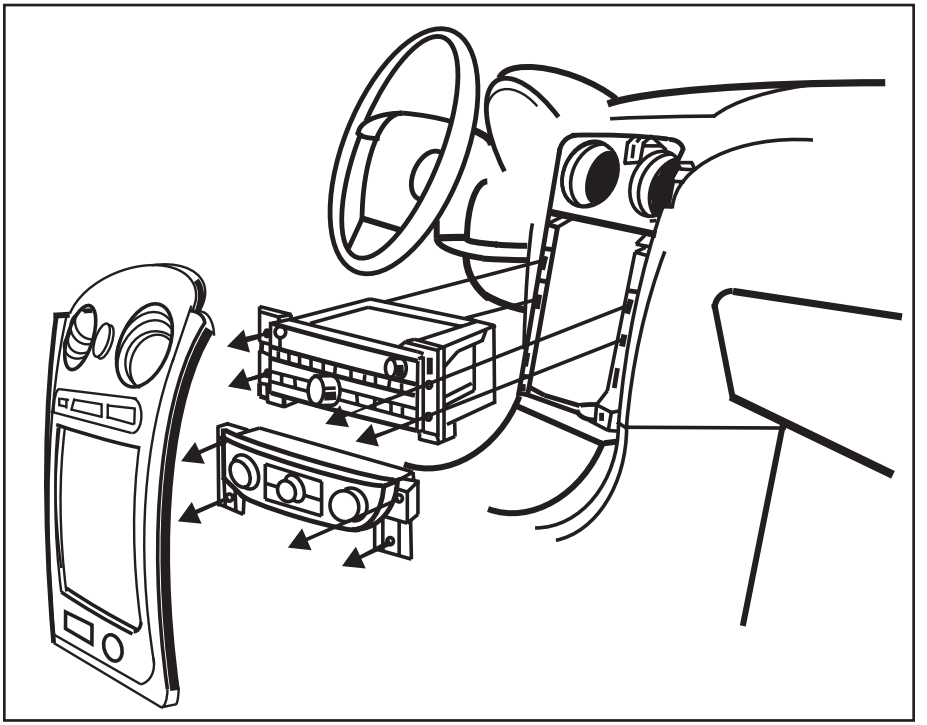

(Figure B)

Chevrolet Malibu 2004-2007

1. Unclip and remove wood grain/painted trim pieces from both sides of steering wheel. (Figure A)
2. Unclip and remove side panel from driver's side of dash with door open and remove (2) 7 mm screws. (Figure B)
3. Remove (2) 7 mm screws from bottom edge of panel below steering wheel, unclip panel and let hang. It is not necessary to completely remove panel. (Figure C)
4. Unclip and remove wood grain/painted trim piece from above glove box. (Figure D)

Continued on next page

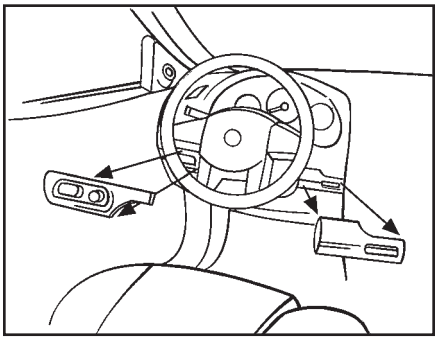

(Figure A)

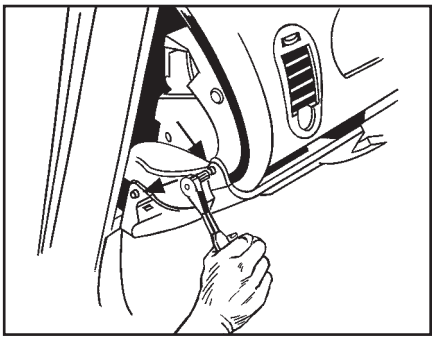

(Figure B)

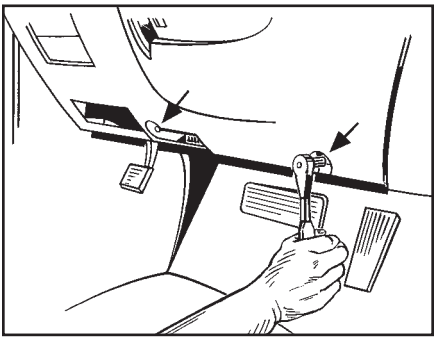

(Figure C)

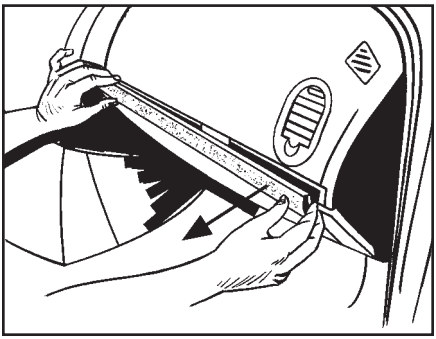

(Figure D)

Chevrolet Malibu 2004-2007

5. Unclip and remove side panel from passenger side of dash with door open and remove (2) 7 mm screws from behind panel. (Figure E)

6. Remove (2) 7 mm screws from bottom of glove box then open box and squeeze sides together to open further and remove the remaining (4) 7mm screws. Unclip the black vent cover under the glove box then unclip and remove entire glove box assembly. (Figure F)

7. Unclip and remove trim panel surrounding radio and climate controls. (Figure G)

8. Remove (4) 7 mm screws securing the radio and (2) 7 mm screws securing the climate control. Unplug and remove the radio. (Figure H)

Continue to kit assembly

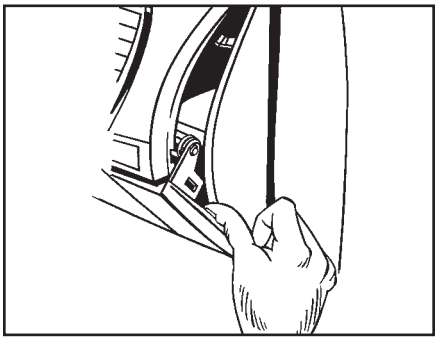

(Figure E)

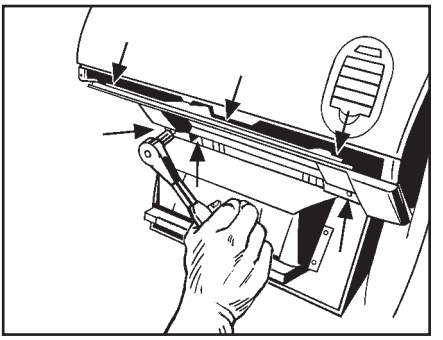

(Figure F)

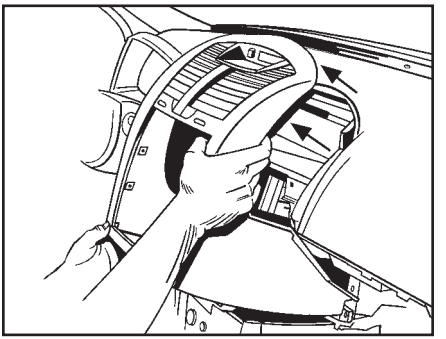

(Figure G)

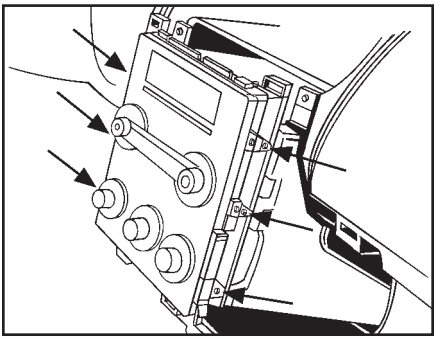

(Figure H)

Chevrolet Malibu 2008-up

1. Unsnap and remove shifter trim. ***Note – start around shifter and be sure to pull down before back because this panel slides up under the radio/ climate panels.*** (Figure A)
2. Remove (2) 8 mm screws from bottom of radio/climate panel.
3. Unsnap and remove the climate/ radio panel and upper vent trim panel together. *(They can be separated after removel)* (Figure B,C)
4. Remove (6) 8 mm screws from radio and climate controls.

Continue to kit assembly

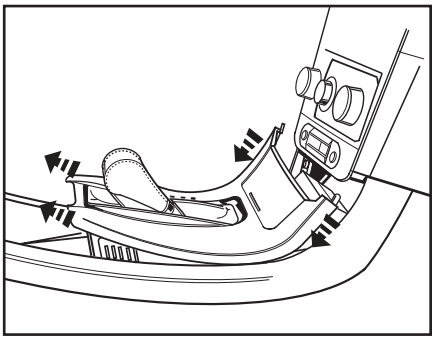

(Figure A)

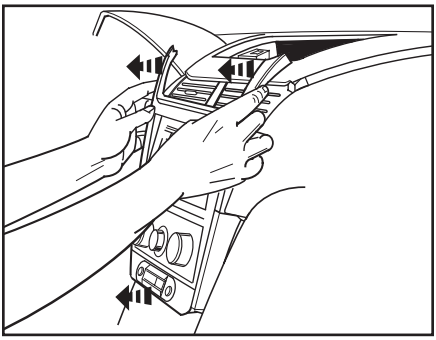

(Figure B)

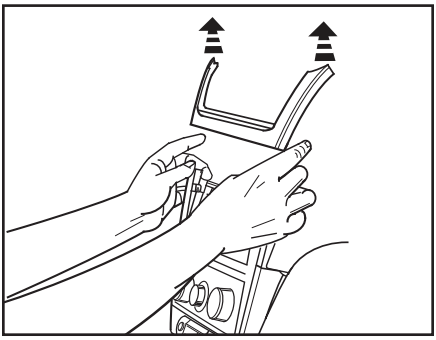

(Figure C)

Pontiac G6 2005-2010

1. Open glove box and remove (6) screws from outer edge then unclip and remove box. (Figure A)
2. Remove (4) screws from panel below steering column. Unclip and remove panel. (Figure B)
3. Unclip and remove center panel surrounding radio and A/C controls. (Figure C)
4. Remove (4) screws securing the radio. Unplug and remove the radio. (Figure D)

Continue to kit assembly

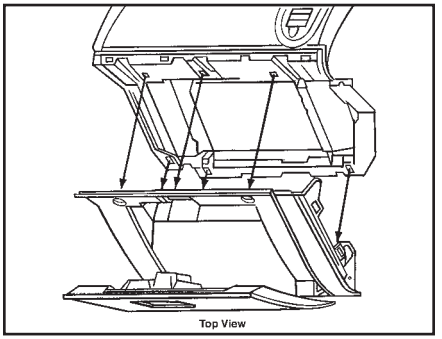

(Figure A)

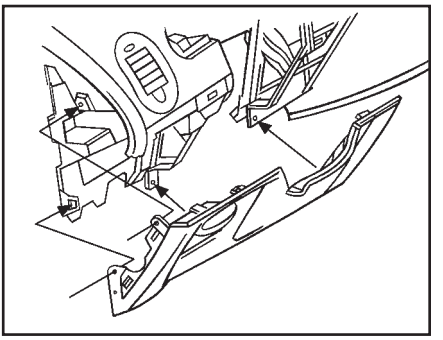

(Figure B)

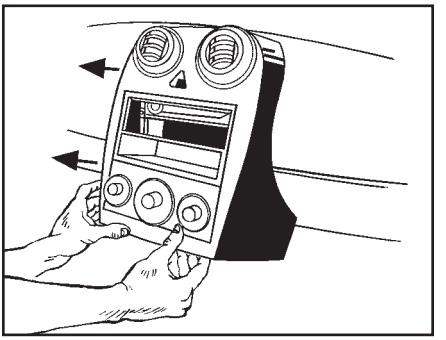

(Figure C)

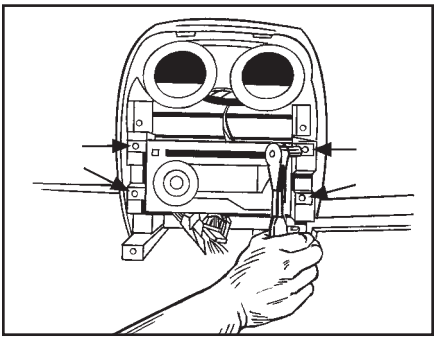

(Figure D)

Pontiac Solstice 2006-2009

1. **Manual transmission:**
   - **a.** Lift up the lower edge of the instrument panel cluster trim plate enough to reach underneath and release the shift boot trim ring retaining tabs. (Figure A)
   - **b.** Lift up on the shift boot and loosen the setscrew to release the shift lever. (Figure B)

1. **Automatic transmission:**
   - **a.** Unclip and remove shifter trim ring. (Figure C)

2. Unclip and remove passenger assist handle trim panel. (Figure D)
3. Remove (2) bolts securing the passenger assist handle and remove handle. (Figure D)
4. Unclip and remove dash trim panel.
5. Remove (4) screws securing the radio. Unplug and remove the radio.

Continue to kit assembly

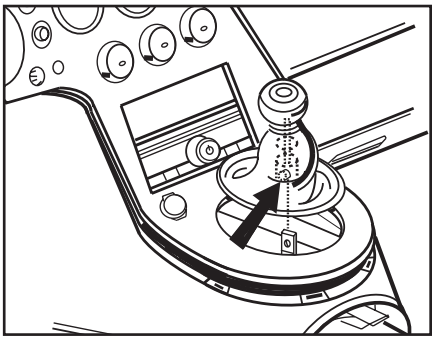

(Figure B)

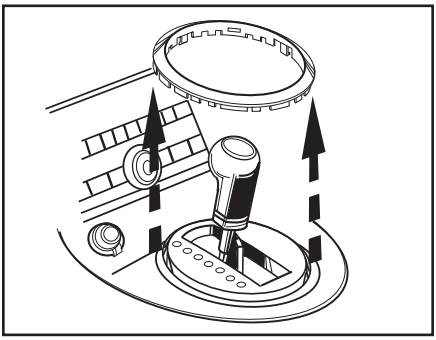

(Figure C)

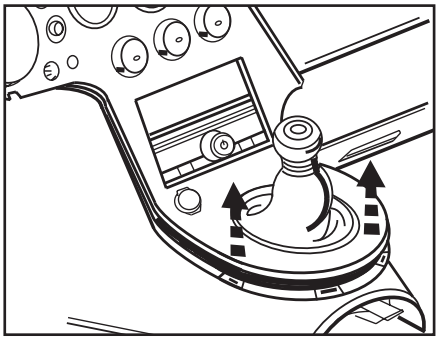

(Figure A)

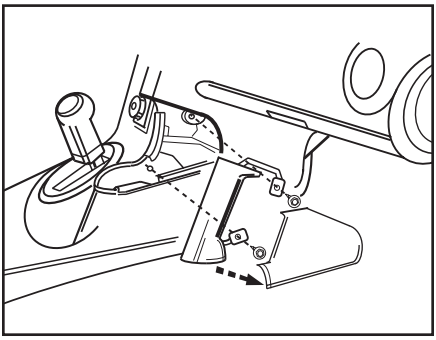

(Figure D)

Saturn Aura 2007-2009

1. Unclip and remove shifter trim ring. (Figure A)
2. Unclip and remove the center console trim panel, then remove (2) screws from bottom edge of dash trim panel. (Figure B)
3. Unclip and remove the key switch trim ring, then unclip and remove dash trim panel. (Figure C)
4. Remove (2) screws securing the climate controls.
5. Remove (4) screws securing the radio. Unplug and remove the radio.

Continue to kit assembly

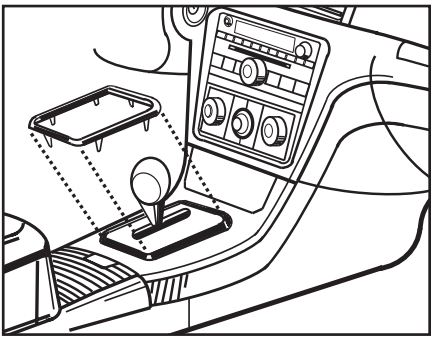

(Figure A)

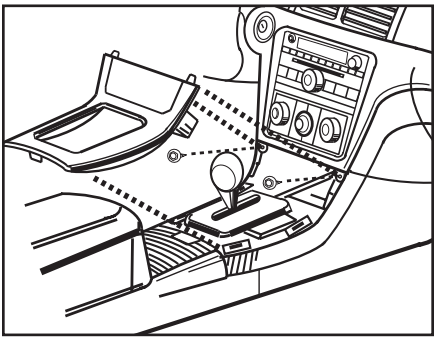

(Figure B)

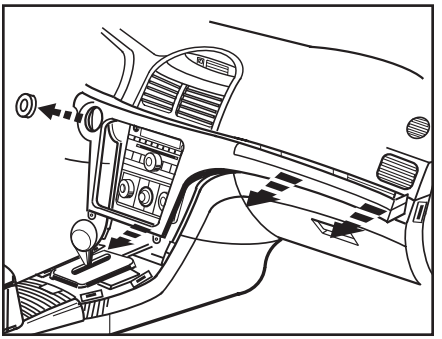

(Figure C)

Saturn Ion 2006-2007

1. Unclip radio trim panel. (Figure A)
2. Unplug connectors from trim panel and remove panel. (Figure B)
3. Remove (4) screws securing the radio. Unplug and remove the radio.

Continue to kit assembly

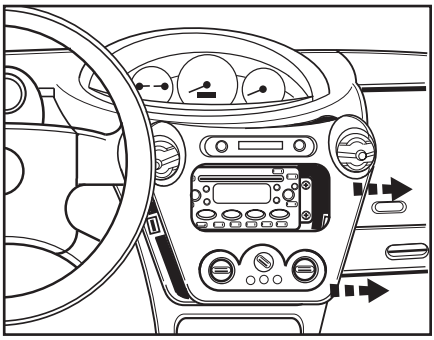

(Figure A)

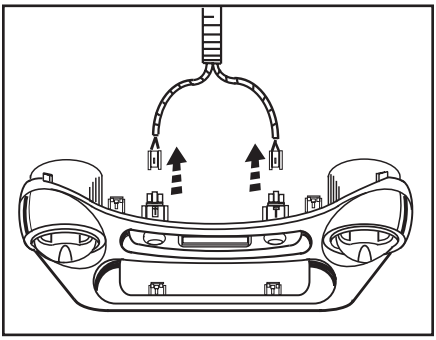

(Figure B)

Saturn Sky 2006-2009

1. Unclip and remove side panel from driver's side of dash with door open and remove (2) 7 mm screws. (Figure A)
2. Remove (2) 7 mm screws from bottom edge of panel below steering wheel, unclip panel and remove panel.
3. Unclip and remove side panel from passenger side of dash with door open and remove (2) 7 mm screws from behind panel. (Figure B)
4. Open the glove box and disconnect the glove box dampener from the glove box assembly. Squeeze sides together to open further. (Figure C)
5. Remove (2) bolt covers from top edge of glove box frame. (Figure C)
6. Remove (5) bolts from glove box frame and remove frame. (Figure C)
7. Unsnap and remove climate control trim panel. (Figure D)
8. Remove (1) screw from lower left corner of radio trim panel and unplug connectors to remove panel. (Figure D)
9. Remove (4) screws securing the radio. Unplug and remove the radio.

Continue to kit assembly

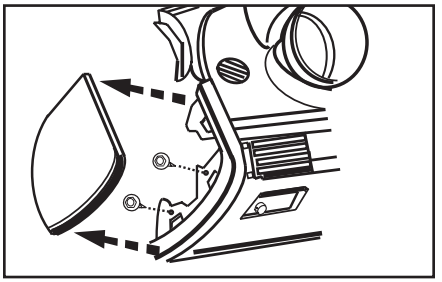

(Figure A)

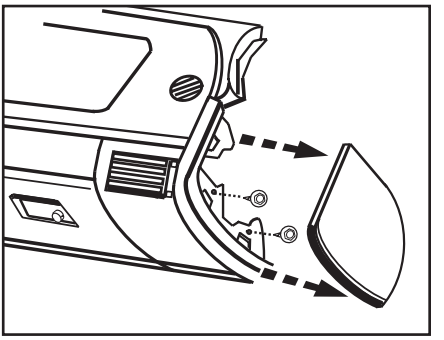

(Figure B)

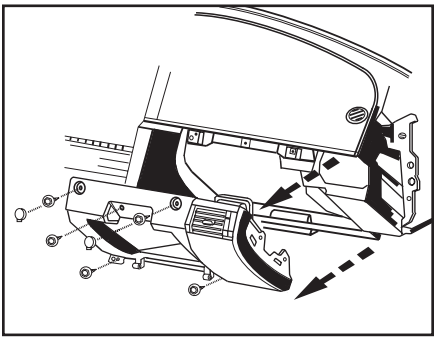

(Figure C)

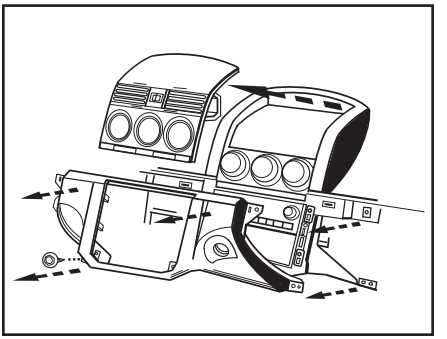

(Figure D)

Saturn Vue 2006-2007

1. Grasp the front edge of the shifter trim panel and pull outward and upward. (Figure A)
2. Squeeze the locking tabs located at the front edge of the shifter trim panel together to release the front edge of the panel from the center console. (Figure B)
3. Pull upward on the panel to release the remaining clips, and remove trim panel.
4. Remove (4) screws securing storage pocket and remove pocket. (Figure C)
5. Unclip and remove center dash trim panel. (Figure D)
6. Remove (4) screws securing the radio. Unplug and remove the radio.

Continue to kit assembly

(Figure A)

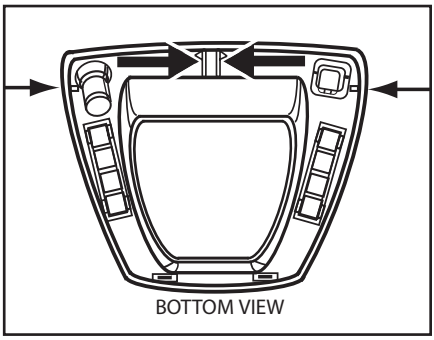

(Figure B)

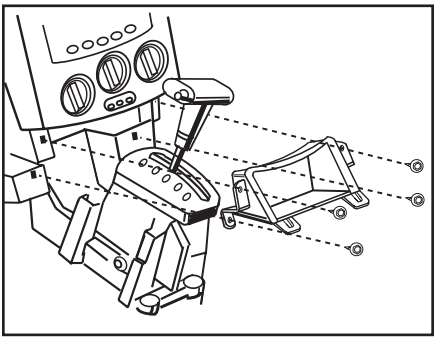

(Figure C)

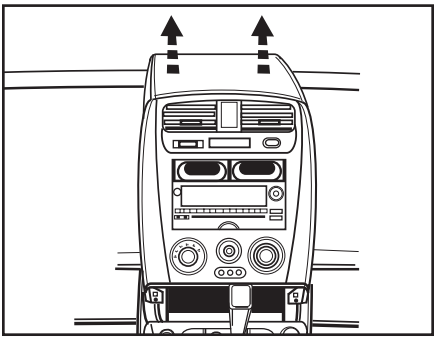

(Figure D)

Double DIN mount radio provision

1. Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS. Re-connect the negative battery terminal and test the unit for proper operation.
2. Slide the appropriate bracket into the trim plate aligning the holes in the trim plate to the clips on the bracket. (Figure A)
3. Slide the DDIN radio unit into the trim plate bracket assembly and secure the unit to the kit using the screws supplied with the head unit. (Figure B)
3. ***Aura, Cobalt, G5, HHR, Sky and Vue only:***
   Cut and remove top mounting tabs on each side of the Radio Housing. (Figure C)
4. Reassemble dash in reverse order of disassembly.

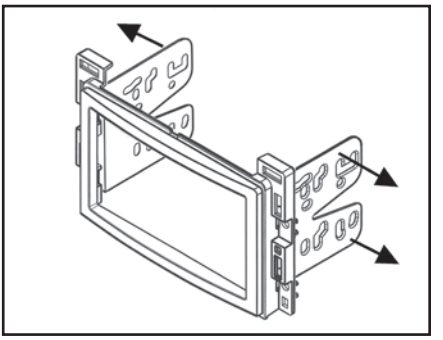

(Figure A)

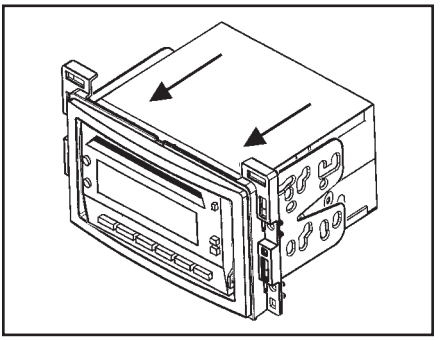

(Figure B)

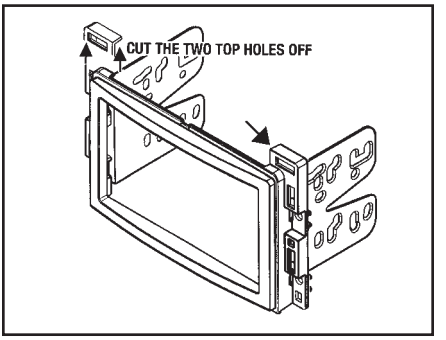

(Figure C)

Stacked ISO mount radio provision

1. Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS. Re-connect the negative battery terminal and test the unit for proper operation.
2. Slide the appropriate bracket into the trim plate aligning the holes in the trim plate to the clips on the bracket. (Figure A)
3. Slide the stacked ISO DIN units into the trim plate bracket assembly and secure the units to the kit using the screws supplied with the head units. (Figure B)
4. ***Aura, Cobalt, G5, HHR, Sky and Vue only:***
   Cut and remove top mounting tabs on each side of the Radio Housing. (Figure C)
5. Reassemble dash in reverse order of disassembly.

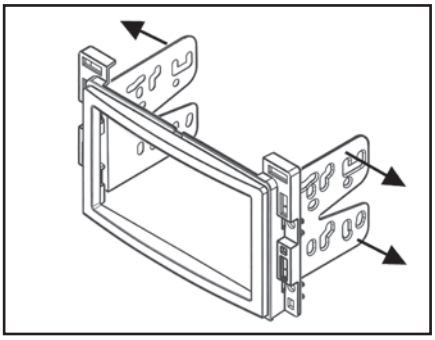

(Figure A)

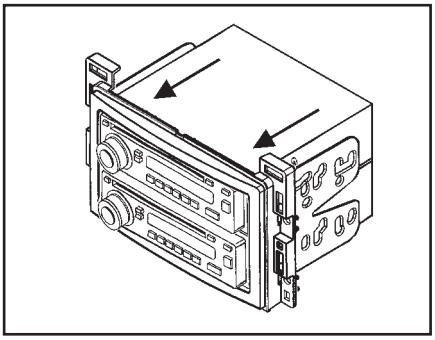

(Figure B)

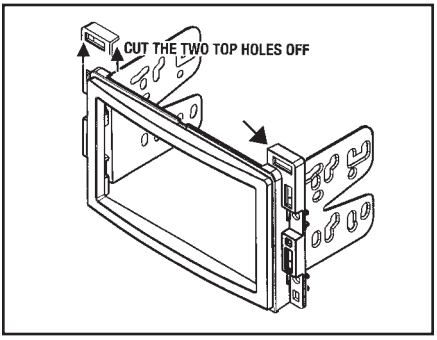

(Figure C)

INSTALLATION INSTRUCTIONS FOR PART 95-3302

REV. 5/31/11

METRA. THE WORLD'S BEST KITS.™

1-800-221-0932

metraonline.com

© COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION